



Ensuring that the AQUAvalve floods and drains correctly

- 1** Making sure your AQUAvalve floods and drains correctly is simply achieved and only takes a few seconds.
- 2** Hold the AQUAvalve at eye level so that you can see the silicon fitted to the top float resting on the hole below it.
- 3** The silicon must create a tight seal when touching the hole.
- 4** If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicon, drop the float and hold at eye level again. Repeat the procedure if necessary.

Care and maintenance

- 1** At the end of your growing season, clean the AQUAvalve using warm soapy water. Using an old tooth brush will help.

The AQUAvalve is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.
- 2** It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve nozzle, this will remove any lime scale build up that may have occurred during the growing season.

Blowing through the AQUAvalve nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve nozzle.

This will potentially damage the AQUAvalve beyond repair.

Your SmartPot 60 System set-up guidelines




SmartPot 60 System contents

- 1x 400 ltr FlexiTank
- 60x 1Pot XL tray and lid
- 60x 18.9 ltr SmartPot
- 60x AQUAvalve
- 1x 16mm tank adapter and filter
- 3x 16mm in-line tap
- 30x 16 - 6mm cross connector
- 1x 16mm cross connector
- 25 metres of 16mm pipe
- 30 metres of 6mm pipe
- 60x PotSock Round

Plan views and options

Suggested layouts

System requires minimum
400 litre FlexiTank (supplied)

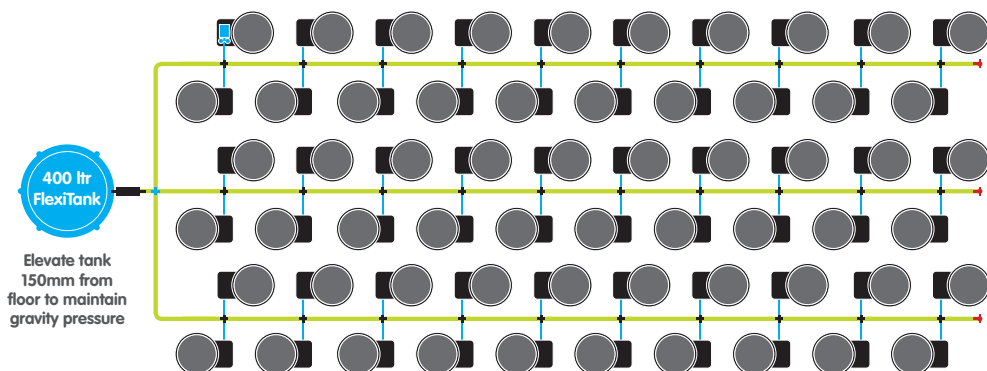


- | | | | |
|--|--------------------------------------|--|----------------------------|
| | AQUAvalve | | 16mm - 6mm cross connector |
| | 16mm click-fit tank adaptor & filter | | 16mm cross connector |
| | 6mm pipe | | 16mm in-line tap |
| | 16mm pipe | | |

Advice

- Please note that multiple SmartPots may increase room humidity due to the exposed surfaces of the fabric pots.
- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 7 to 10 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your tank to a minimum of 150mm above the highest AQUAvalve and re-fill the tank when there is approximately a 1/3 of the solution left - NEVER ALLOW THE TANK TO RUN EMPTY.
- For best results, we recommend mineral fertilisers. Do not use organic fertilisers, as they have a tendency to block small pipe work.
- Clean all substrate from the bottom and sides of the pots before placing in each tray. This will ensure your system is clean from the start.
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles.

SmartPot 60 dimensions

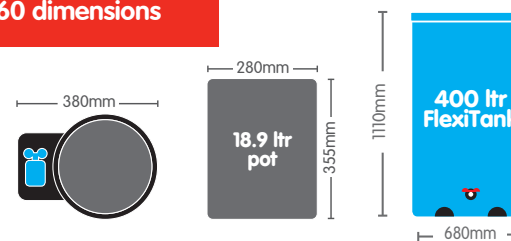

SmartPot 60 System setup instructions

- Fit the PotSock Round over the base of each SmartPot
- Fill SmartPot with medium and pot up plants.
Water through pot and allow to drain outside the tray.
- Remove collar.
Push 6mm pipe through collar and attach to AQUAvalve nozzle.
Rescrew collar - **DONT overturn...** when you feel it grip **STOP**.
- Connect AQUAvalve so 'half moon' is on T section in the tray.
- Position tray so it is level.
- Cut 6mm/16mm pipe to appropriate length
- According to the size of your system connect your 6mm/16mm pipe to relevant fitting or tank...
- Place SmartPot in the tray, make sure it is **CLEAN!**
Place lid over valve onto tray.

Using your front instruction sheet, repeat the module set up instructions for the number of trays.

Allow your plants to establish for 7-10 days before turning system on

Advice

If you require any guidance email - mail@autopot.co.uk